



CONTROLS




COM1 and COM2 are the same type of port.
Control and air curtain cables can be
connected to either COM1 or COM2.

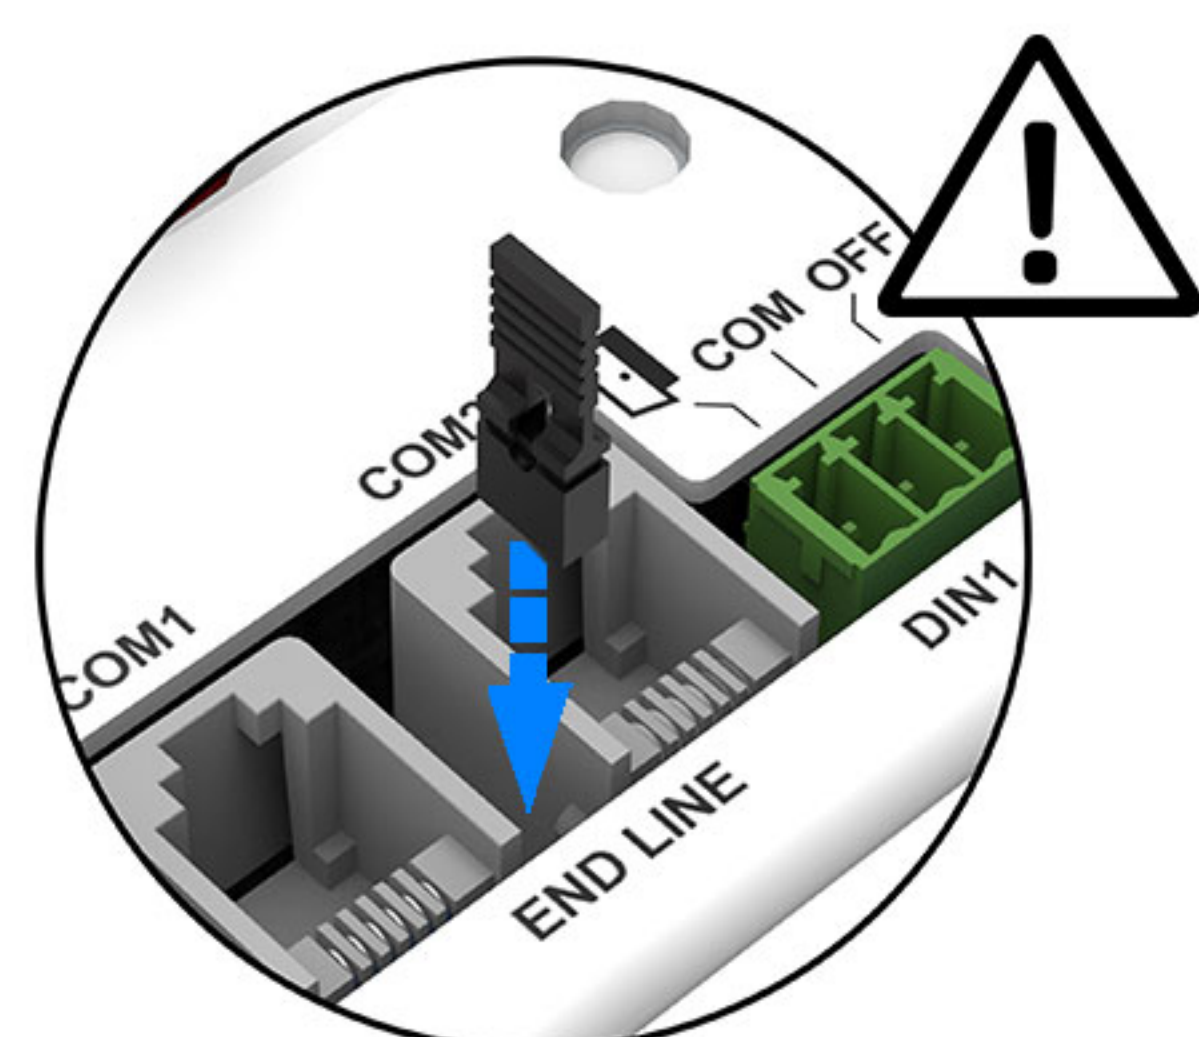

When multiple air curtains are
connected to an only control,
the last one must incorporate a
Jumper in "END LINE" pins.



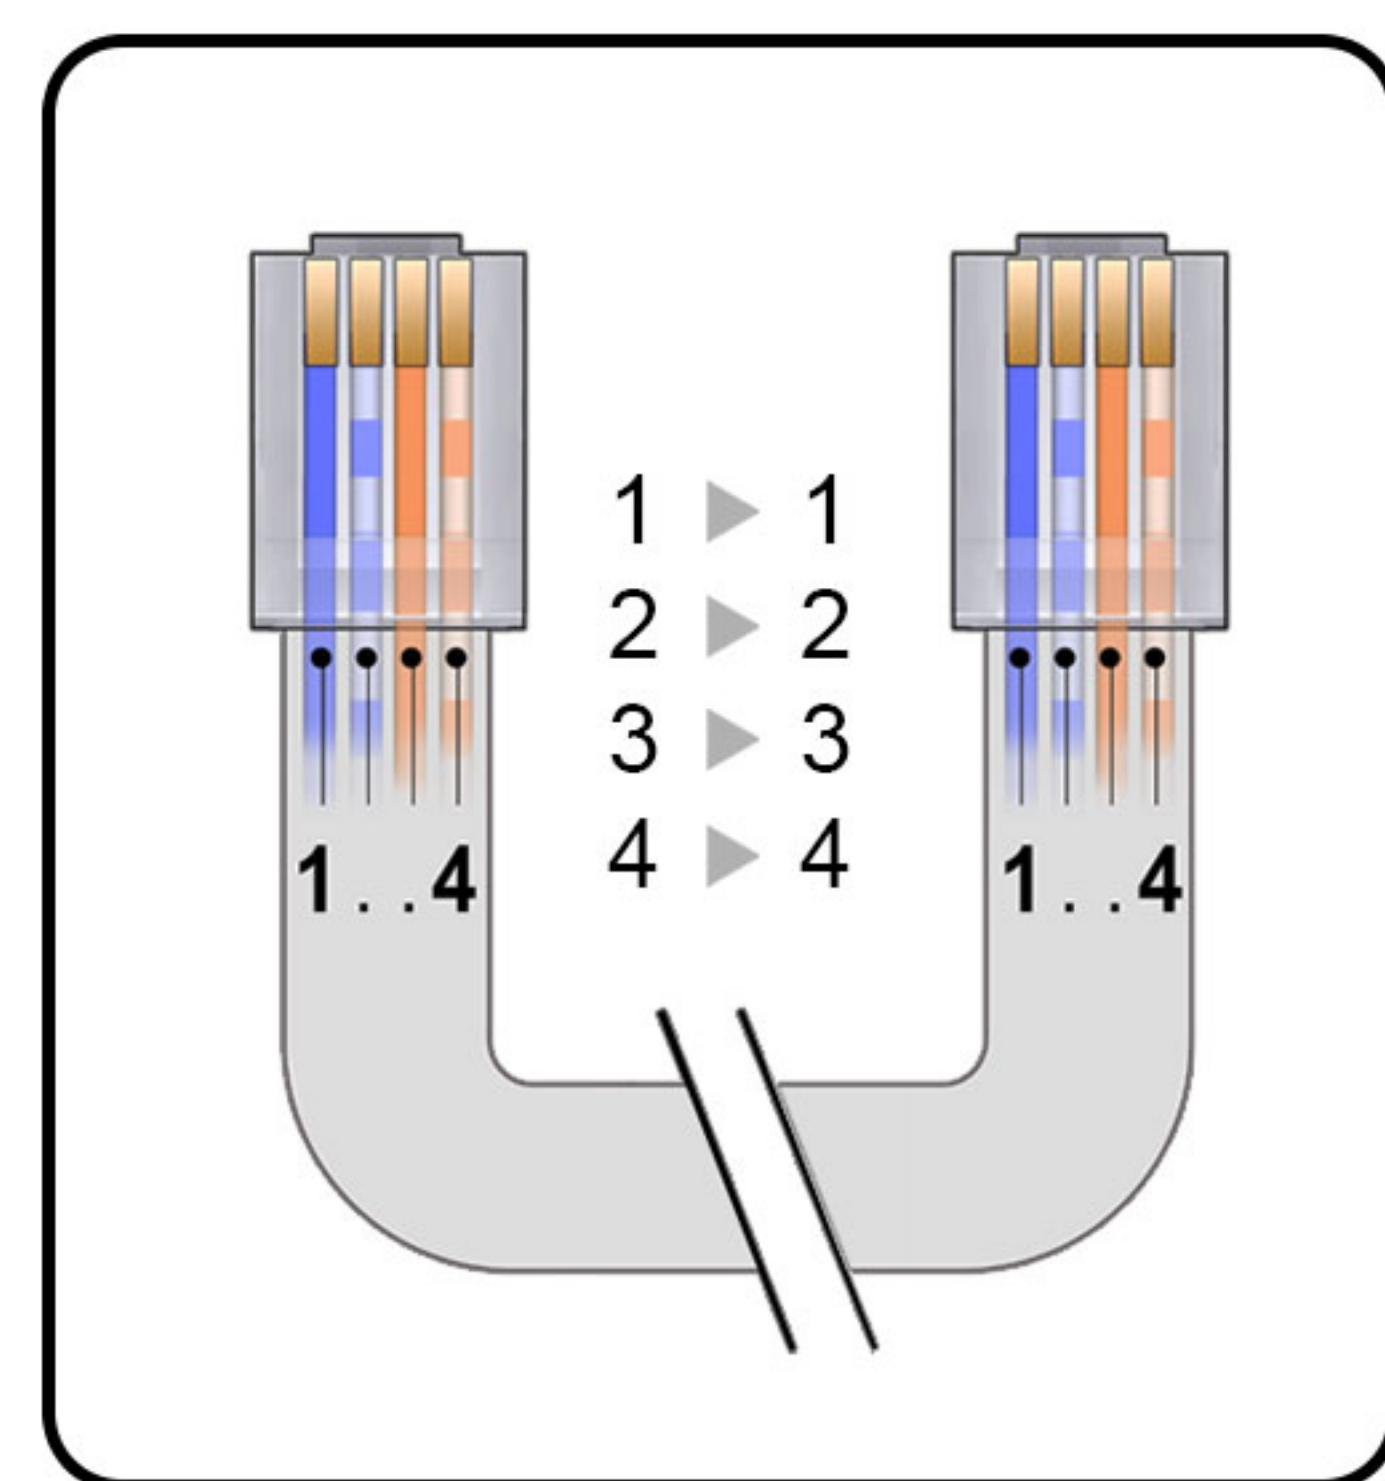


4 PINS CONNECTOR RJ11
Are used for the connection to the
control and also to the slaves air
curtains connected


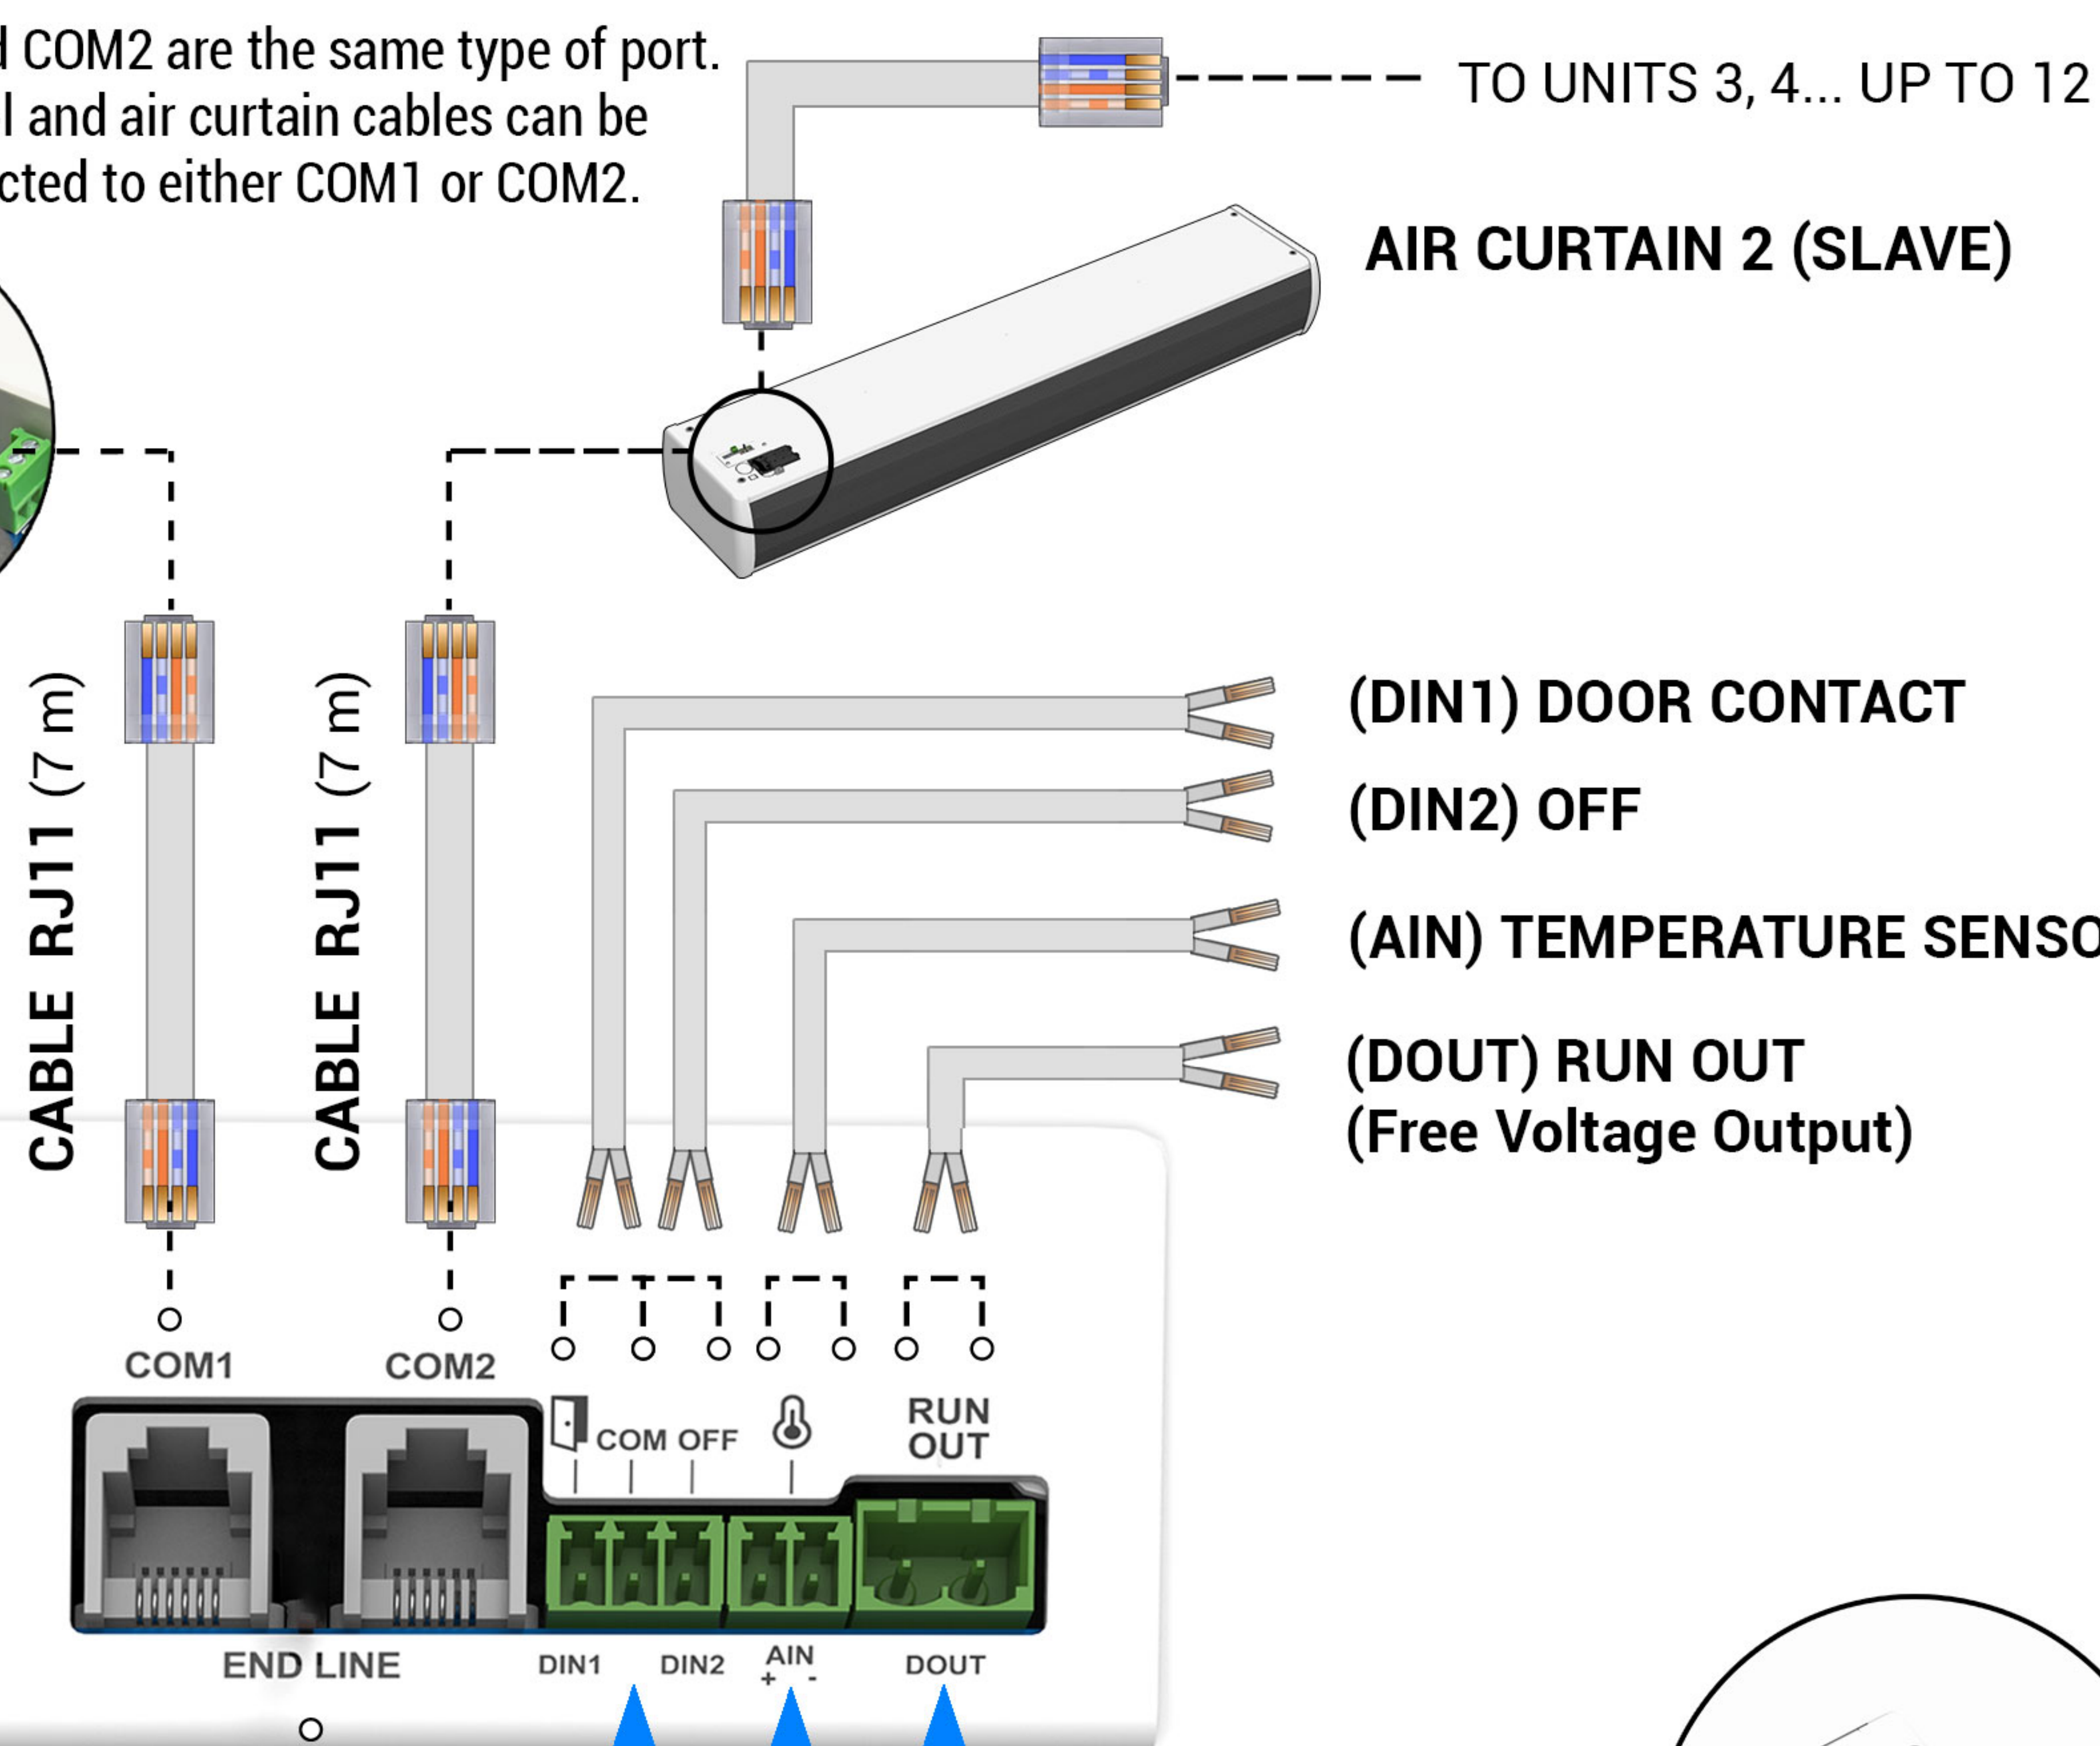


Removable
connectors

MODELS

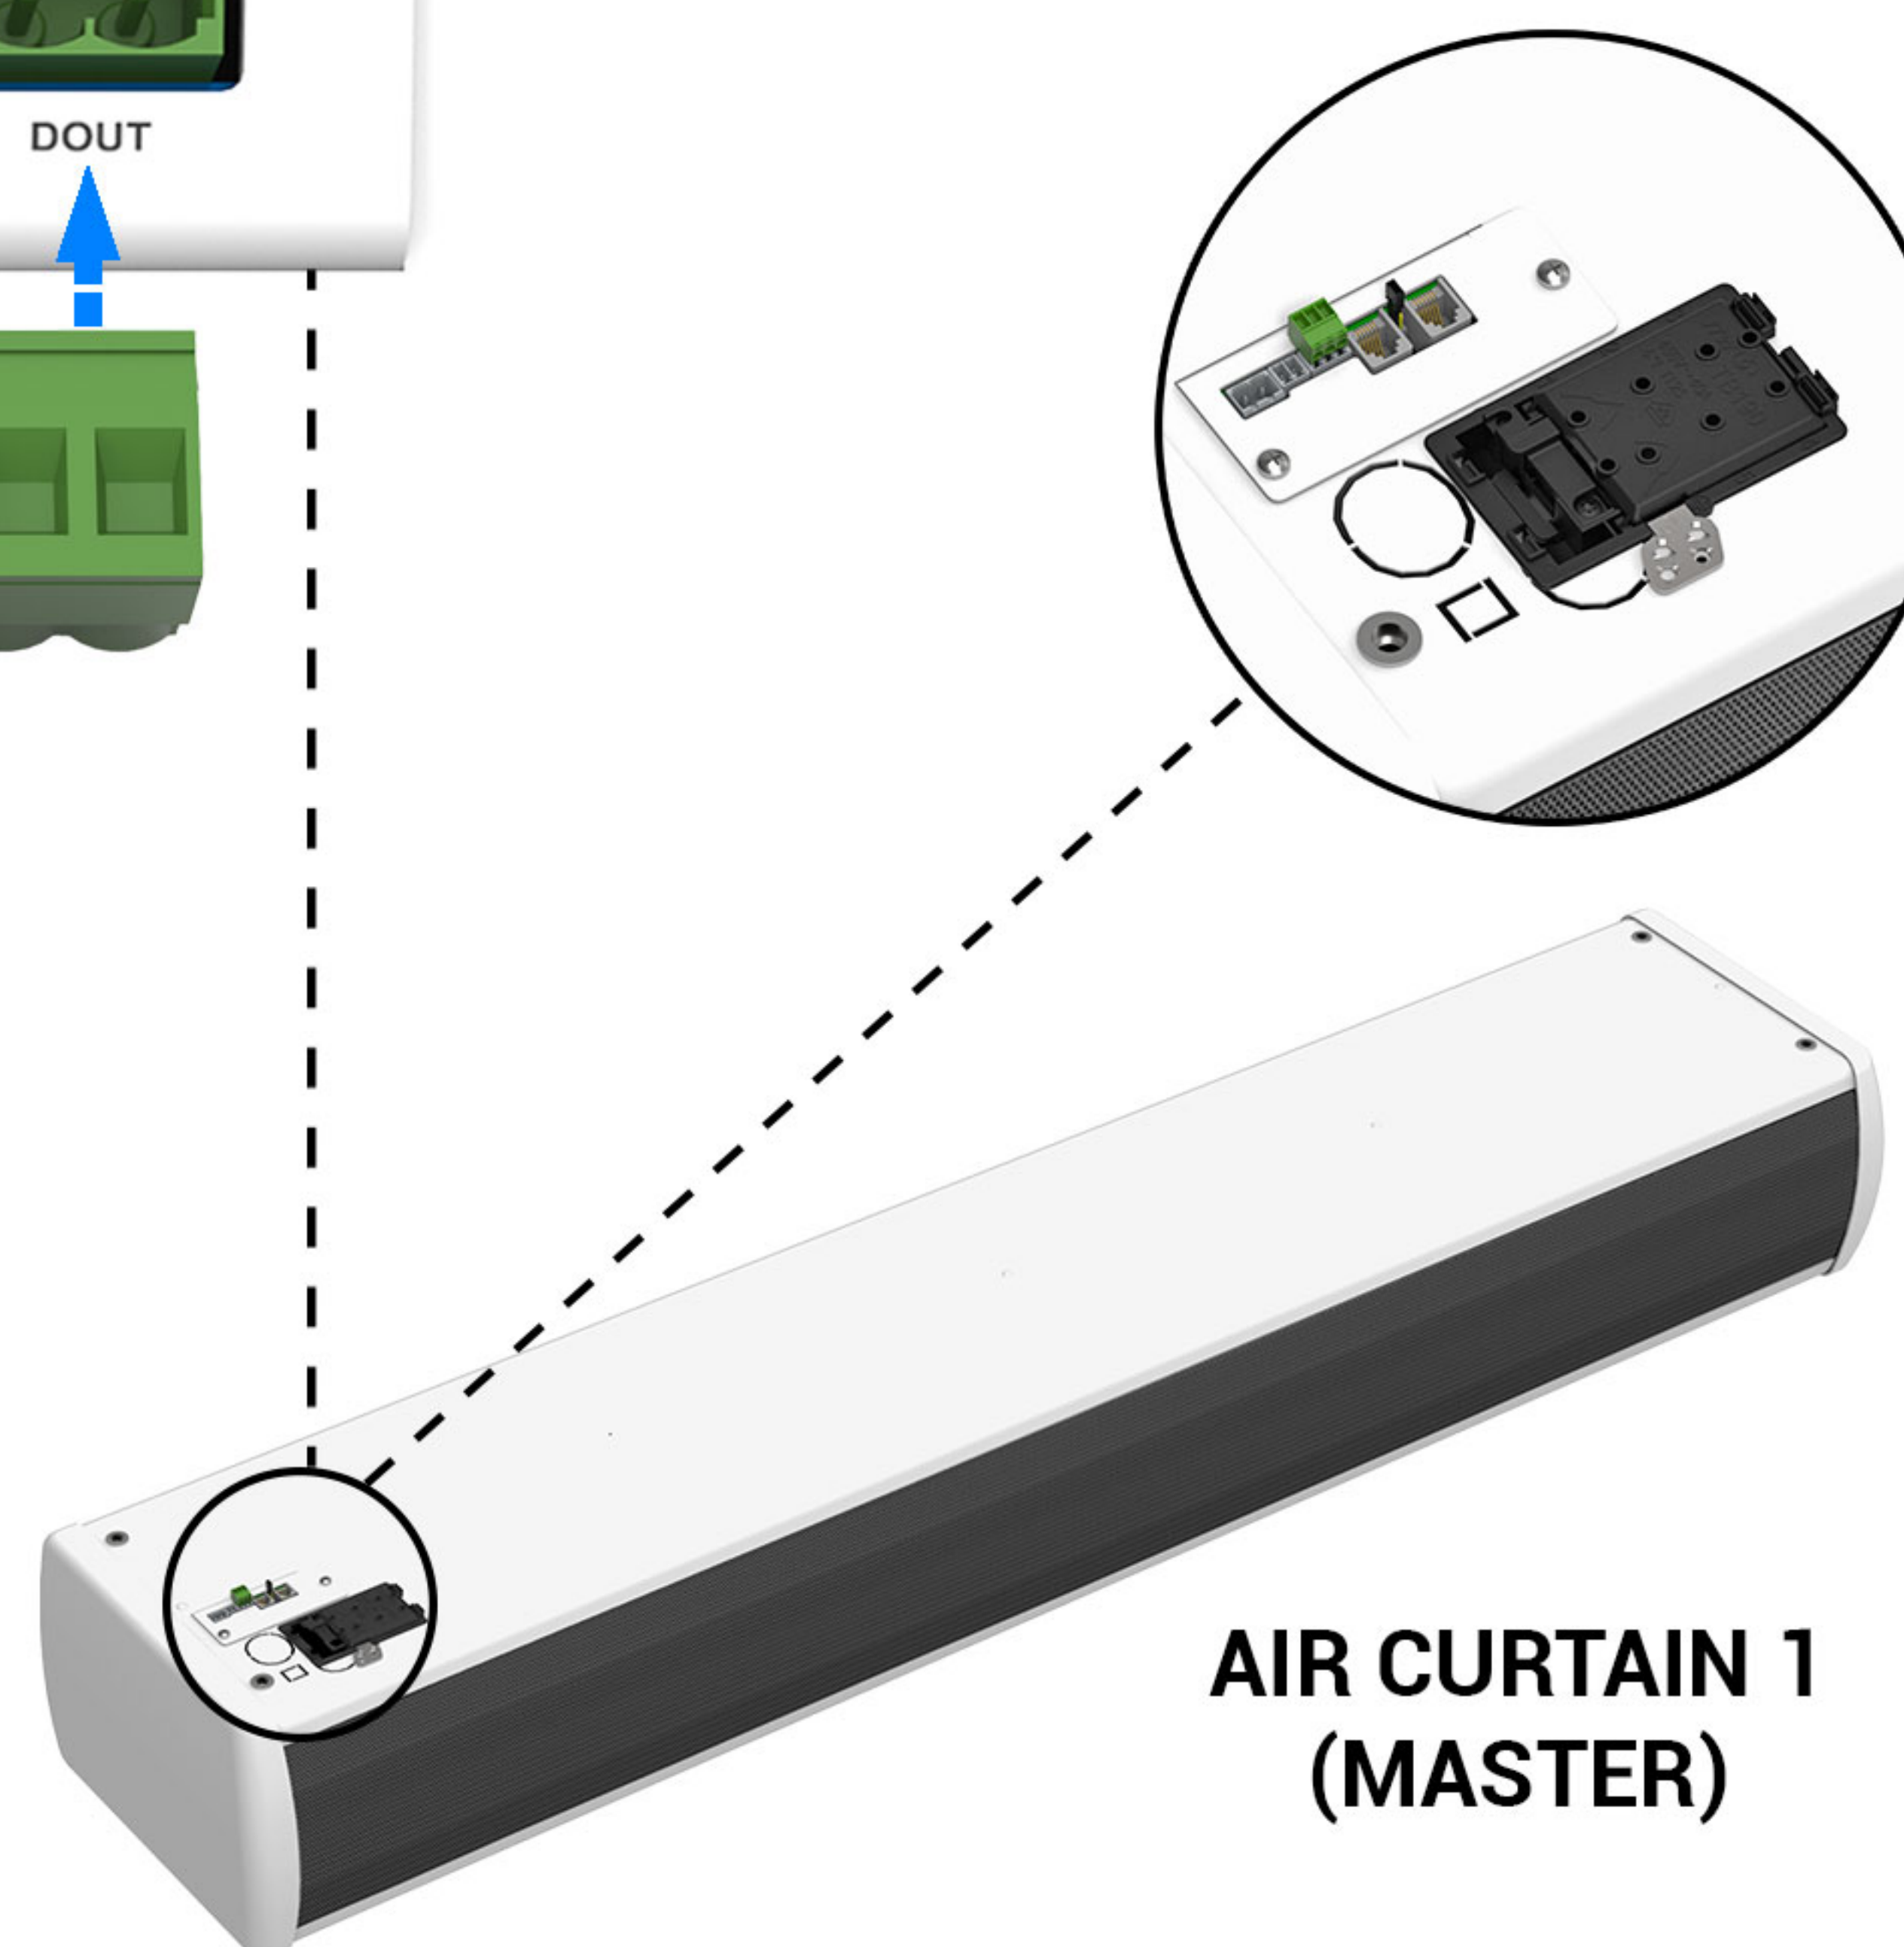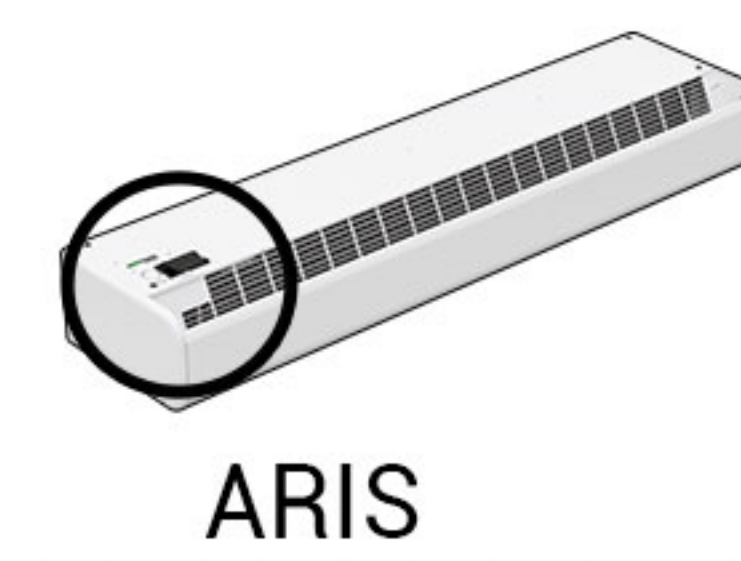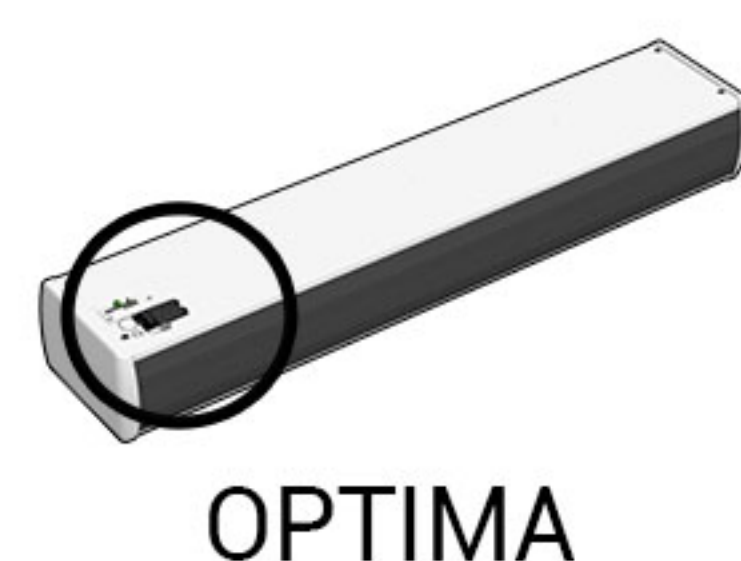

POWER SUPPLY CONNECTION BOX

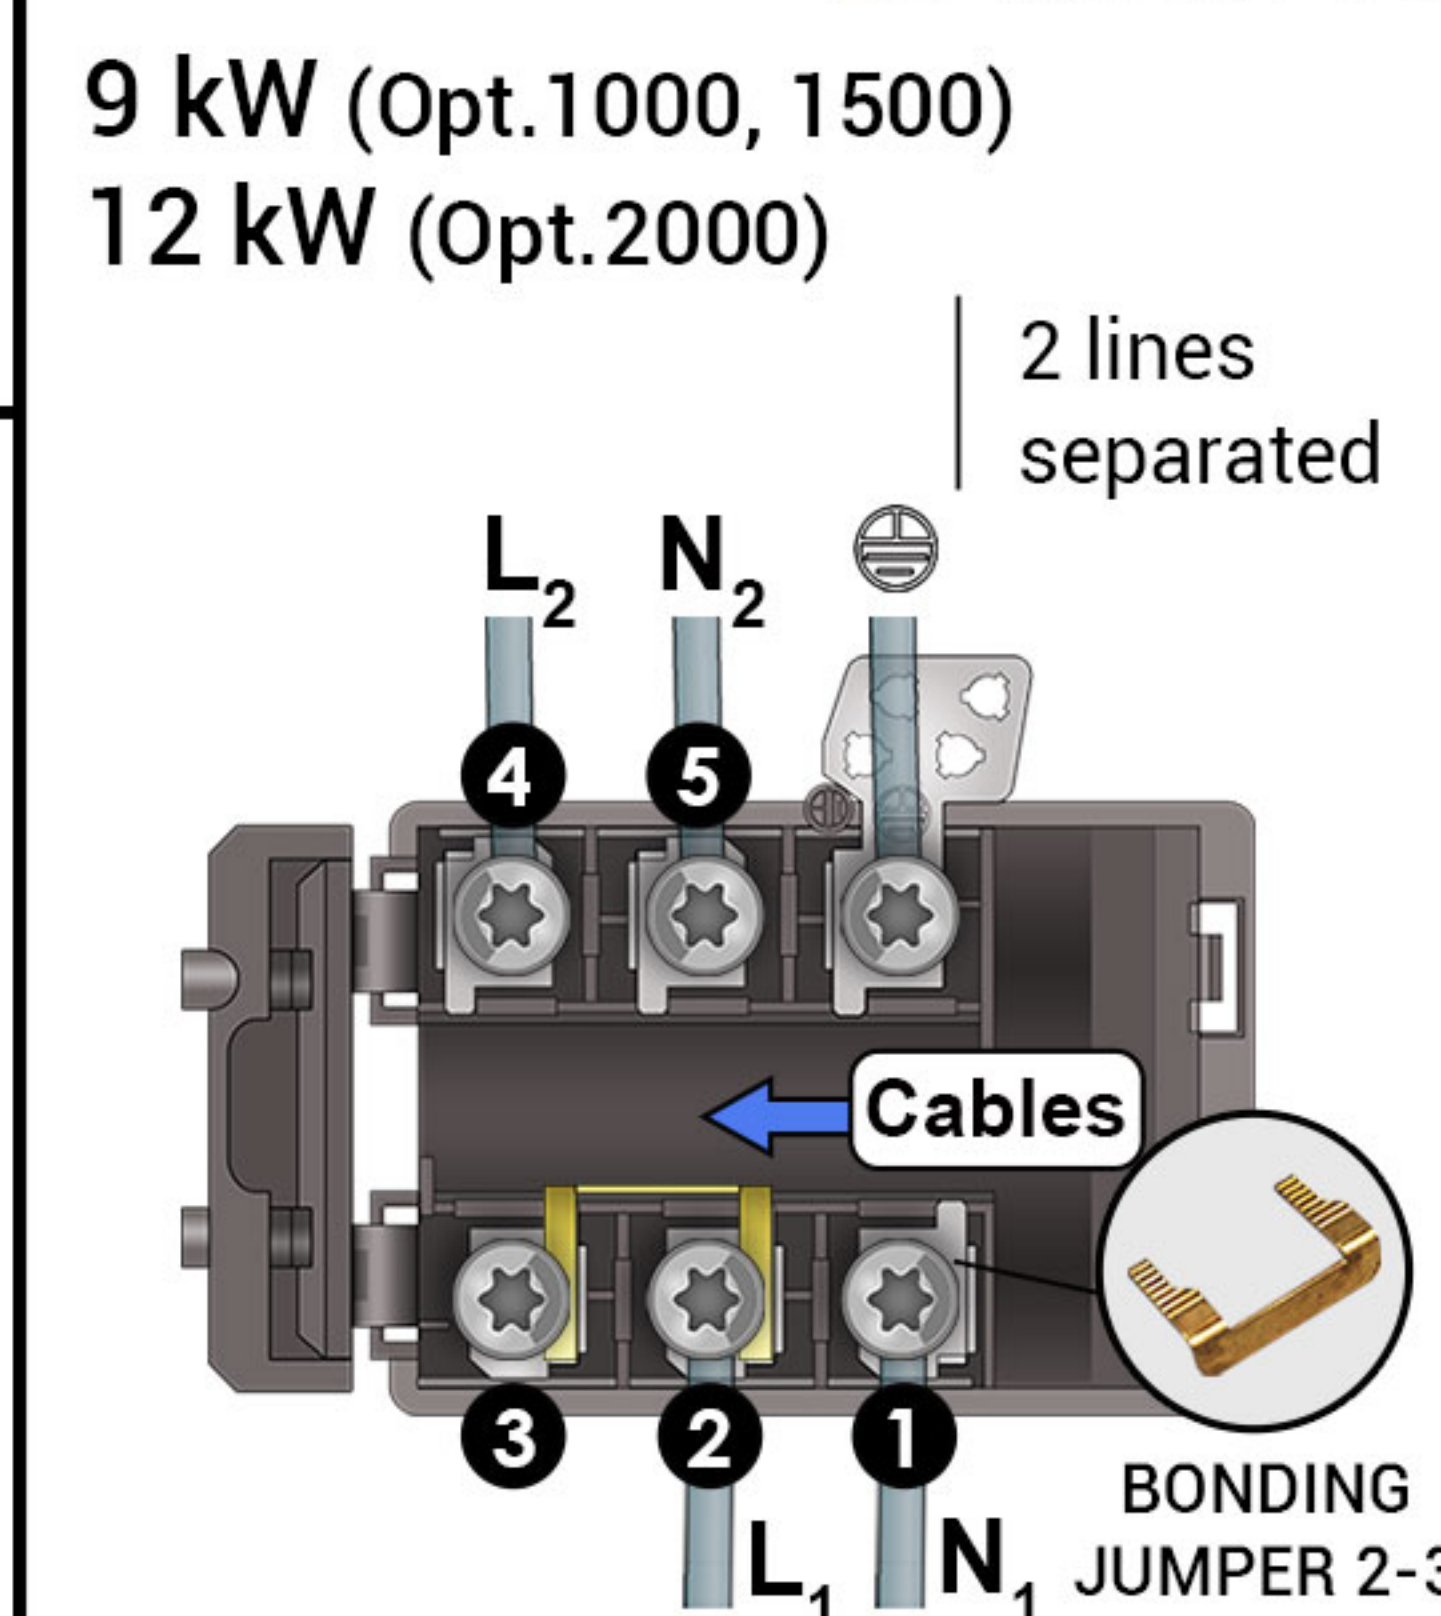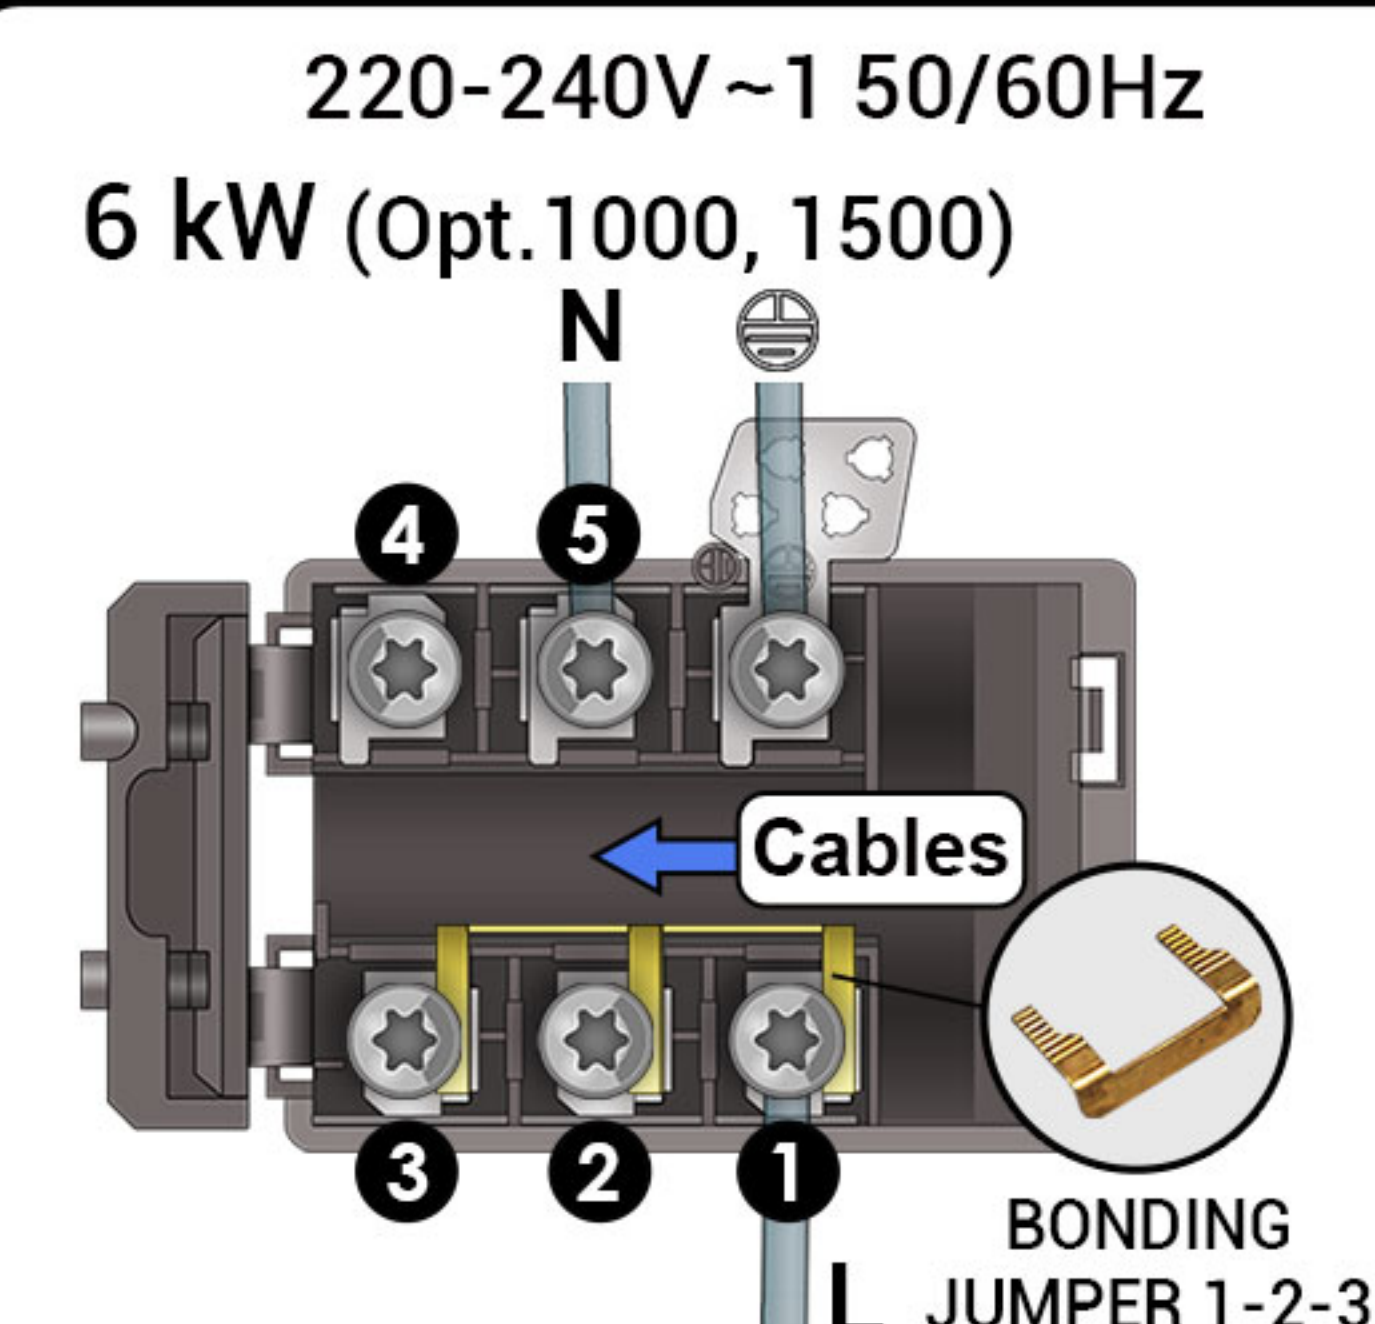


1~PHASE

220-240V ~1 50/60Hz

3~PHASE

400V ~3 50/60Hz

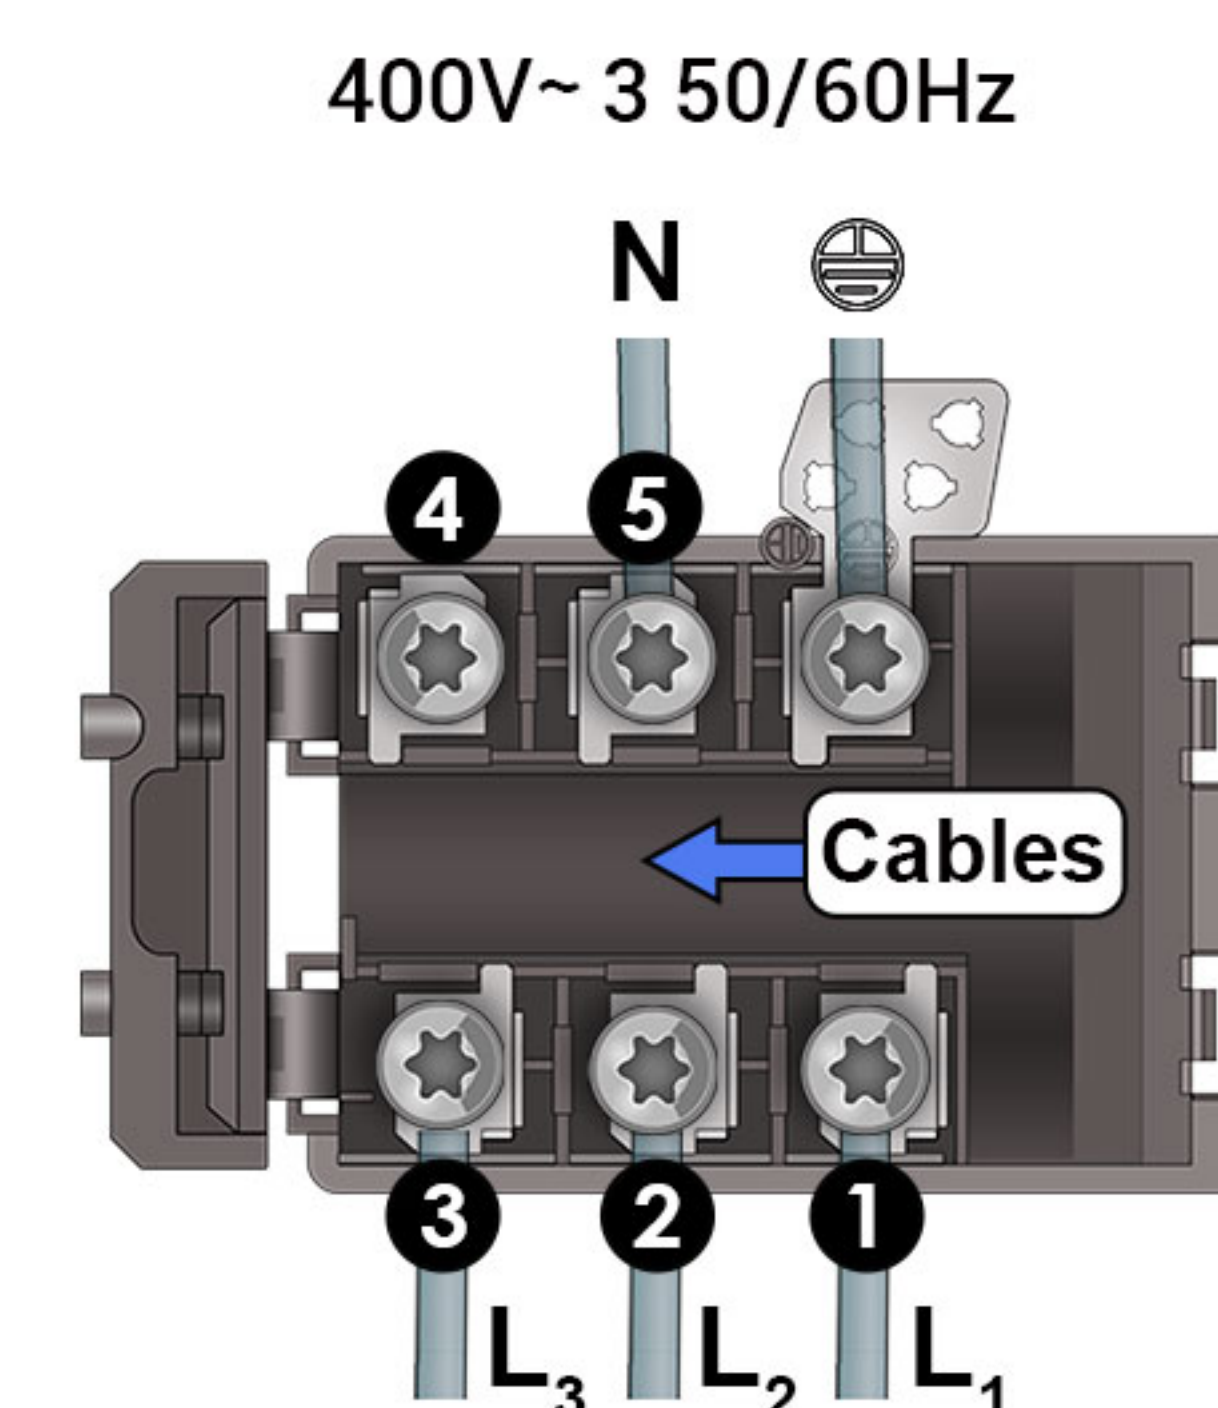

The ARIS is only available for a
400Vx3 power supply.